

Switch to Serial

Note, also, that to begin serial communication, you must put the CPU into serial communication mode. Do the following:

Press the service mode switch. All LEDs flash.

Press the HEAVY SOIL and EXTRA RINSE buttons SIMULTANEOUSLY. The display shows "0 00".

Press the START button. 0 00 flashes.

Press the COLD cycle button. The display now flashes "1 00".

Press the START button. Display stops flashing.

Press the service mode switch.

The display will now show "-- --", indicating that the controller is in SERIAL COMMUNICATION mode, and awaiting commands.

To switch it back:

Locate small "red" reset button behind the left digit in the display. Press and hold down button.

After several seconds the control module will chime and the 4 segment display will show 0.25. The washer is now in coin mode.